

# ABSOLUTE CLICK HERE



We are working on that.

Please go to the  
underflow captor P-R 50 or the  
overflow captor P-R 60  
that is more important

Remember:  
For the famous 4120  
which is -A and -R functional,  
most customers use the -R function,  
by setting the right potentiometer  
to the present flow rate,  
then the left potentiometer  
set point % for the alarm.

The better solution is the **R-captor**

You get your A-captor,  
but you **missed 75% of your sales.**

---

**weber**

England: Phone:+44-1704-548-706 + email: sales@captor.co.uk

Sensors Ltd Germany: Phone: +49-4128-591 + email: info@captor.de

Sensors Inc. USA: Phone:+1-770-592-6630 + email: info@captor.com

And all of our partners as a **Member of the captor Group** world wide