## proxi - captor

# Type 2610.30



## Installation and Adjustment Instructions

Please read carefully: No liability can be accepted for damage caused by improper use of the captor.

#### A. Installation and connection instructions

Mounting of the proxi-captor by means of four (4) M10 screws into the holes of the mounting plate (220 x 220 mm). Connection of the supply voltage and the output according to the connection diagram.

### **B.** Adjustment Instructions

- 1.0 Max. output signal (max. distance)
- 1.1 Without any coverage of the proxi-captor, adjust the highest output signal (> 20 mA), with the "Sensitivity" potentiometer (anticlockwise rotation).

Clockwise rotation : lowest values Anticlockwise rotation: highest values

1.2 Put the measuring plate (min. 260x260x2 mm, Mat. ST37) on the sensing surface of the proxi-captor.

Adjust, with the zero potentiometer, the output signal to 0 mA (4 mA).

Clockwise rotation : highest values Anticlockwise rotation: lowest values

1.3 Without any coverage of the proxi-captor adjust, with the "Sensitivity" potentiometer, the output signal to 20 mA (clockwise rotation).

Clockwise rotiation : lowest values Anticlockwise rotiation: highest values

- 1.4 Repeat 1.2 + 1.3, until both signals are stable.
- 2.0 Displacement of the zero point (i.e. 4 mA)
- 2.1 Adjustment see 1.1
- 2.2 Adjustment see 1.2, but to 4 mA
- 2.3 Adjustment see 1.3
- 2.4 Adjustment see 1.4

#### **Connection diagram**





