


# Operation`s Manual

## flow-captor

### 4115.30 sm x

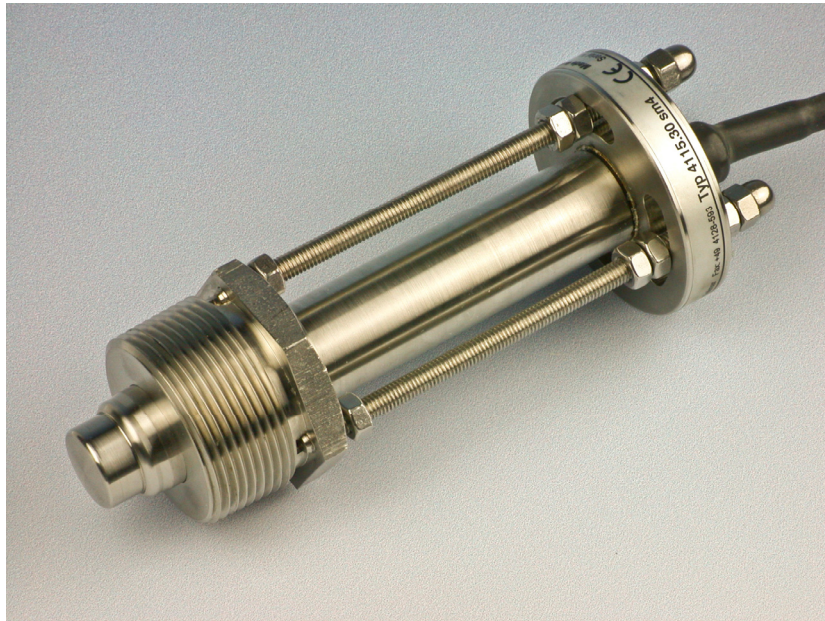

#### **weber**

Sensors GmbH Strohdeich 32

Sensors Ltd. 66 Eastbourne Road, Southport

Sensors LLC. 4462 Bretton Court, Building 1, Suite 7

DE-25377 Kollmar

Merseyside PR8 4DU, UK

Acworth, Georgia 30101, USA

Tel.: +49 (0)4128 - 591 · Fax: - 593

Tel.: +44 (1704) - 551684 · Fax: - 551297

Tel.: +1 (770) 592 - 6630 · Fax: - 592 6640

**www.captor.de**

info@captor.de

sales@captor.co.uk

sales@captor.com

# flow - captor

Type 4115.30 sm



## Installation and Adjustment Instructions

**Please read carefully:** No liability can be accepted for damage caused by improper use of the captor.

**Before any handlings „Safety Instructions“ must be fully read!**

### 1.0 Items delivered

1.1 flow-captor smart meter type 4115.30 sm consisting of:

1.1.1 Sensor unit

1.1.2 Sensor fitting DIN ISO 228 G 1-1/2“ complete with all sensor unit mounting parts, see at 4.0 parts list

**alt.**

1.1.3 Sensor fitting 1-1/2 in. NPT complete with all sensor unit mounting parts, see at 4.0 parts list

1.2 Screwdriver for adjustment

### 2.0 Installation Instructions

2.1 Installation depth: 1/7x ID pipe sizes from 1,5“ to 24“

2.2 Orientation to flow: see drawing “Installation“

2.3 **Fitting position:** preferably in ascending pipes or in horizontal pipes with flow-captor in horizontal position. For optimal flow, straight pipe should be min. 7 x ID before, and 5 x ID behind the flow-captor.

2.4 **Mounting:**

Screw in flow-captor smart meter into the fitting on the pipe side and fix it at the correct insertion depth of 1/7 x ID (see drawing no. K704315A)

2.5 **Initial operation:**

Connect flow-captor to 24 VDC according to connection diagram and wait approx. 2 min. before starting any measurement.

The flow-captor smart meter has been calibrated to the specified type related flow rate (standard: medium water)

**4115.30 sm 3:** 0 to 1.0 m/s

**4115.30 sm 4:** 0 to 2.0 m/s

**4115.30 sm 5:** 0 to 3.0 m/s

**4115.30 sm 6:** 0 to 4.0 m/s


At customers plant signal may vary dependent on individual mounting and medium conditions. If re-adjustment is required, please refer to point 3.

Dimensions:


see drawing-no. K704315A

### Installation


Potentiometer, 18 turn, endless

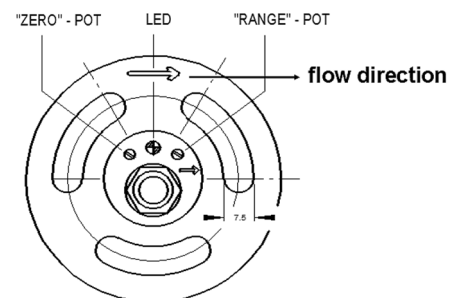

### Positioning

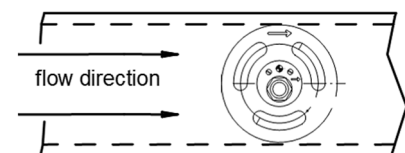

### Connection Diagram

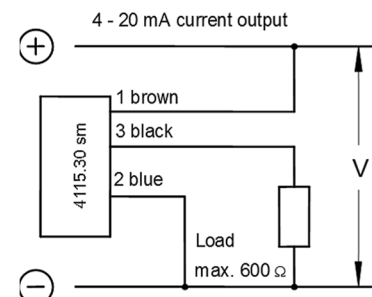

**weber**

Sensors GmbH Strohdreich 32

Sensors Ltd. 66 Eastbourne Road, Southport

Sensors LLC. 4462 Bretton Court, Building 1, Suite 7

DE-25377 Kollmar

Merseyside PR8 4DU, UK

Acworth, Georgia 30101, USA

Tel.: +49 (0)4128 - 591 · Fax: - 593

Tel.: +44 (1704) - 551684 · Fax: - 551297

Tel.: +1 (770) 592 - 6630 · Fax: - 592 6640

**www.captor.de**

info@captor.de

sales@captor.co.uk

sales@captor.com

Technical data subject to alteration! Rev. AJ 21.03.18

# flow - captor

Type 4115.30 sm




## Installation and Adjustment Instructions

**Please read carefully:** No liability can be accepted for damage caused by improper use of the captor.

**Before any handlings „Safety Instructions“ must be fully read!**

### 3.0 Adjustment Procedure

- 3.1 Zero point adjustment in stationary medium (roughly):  
Adjust zero point potentiometer after 2 min. so,  
that  $I_a \gg 4 \text{ mA}$ , i.e. at  $I_a > 4 \text{ mA}$  turn pot. to the left,  
at  $I_a < 4 \text{ mA}$  turn pot. to the right.
- 3.2 Measuring range adjustment at max. flow: Measuring range:  
adjustable from 0-20 cm/s to 0-200 cm/s (medium water).  
Accelerate flow of the medium to a point, where the flow-captor  
should give an output signal of 20 mA and wait min. 2 minutes.  
Turn range pot. until  $I_a = 20 \text{ mA}$  (to the left  $I_a$  will be bigger, to  
the right  $I_a$  will be smaller). The color of the LED will change from  
green ( $I_a \leq 20 \text{ mA}$ ) to red (exceeding measuring range).
- 3.3 Fine adjustment of zero point: After at least 3 minutes standstill  
of flow turn zero point slightly so, that  $I_a$  is just 4 mA (turning  
direction as in 3.1) .
- 3.4 Repeat adjustment according to 3.2 and 3.3 until the zero point  
( 4 mA ) and max. range setting ( 20 mA ) remain constant.

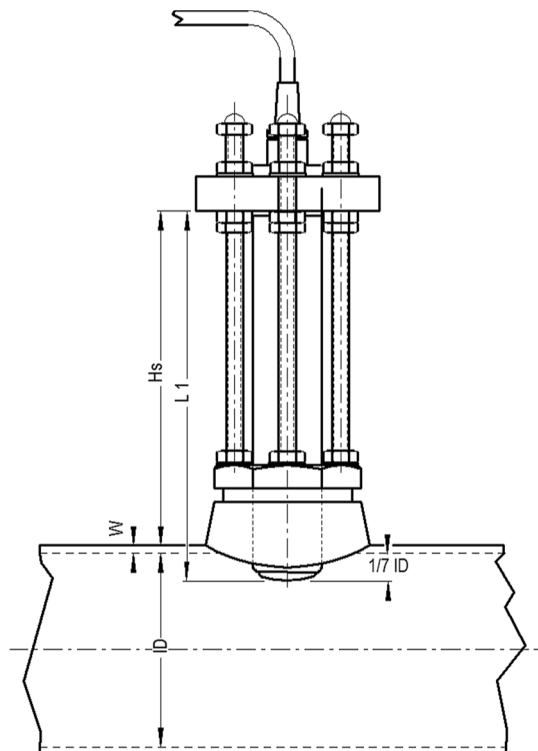

### Calculation of the standard height for 1/7 ID (insertion depth)

$$H_s = L_1 - W - (1/7 \times ID)$$

**H<sub>s</sub>**: standard height

**L<sub>1</sub>**: unit length (see drawing)

**W**: wall thickness of pipe

**ID**: inner pipe diameter

### For example:

$$L_1 = 143 \text{ mm}$$

$$W = 5 \text{ mm}$$

$$ID = 50.4 \text{ (2")}$$

$$H_s = 143 - 5 - (1/7 \times 50.4)$$

$$= 143 - 5 - 7.0$$

$$\gg 131 \text{ mm}$$

**weber**

Sensors GmbH Strohdreich 32

Sensors Ltd. 66 Eastbourne Road, Southport

Sensors LLC. 4462 Bretton Court, Building 1, Suite 7

DE-25377 Kollmar

Merseyside PR8 4DU, UK

Acworth, Georgia 30101, USA

Tel.: +49 (0)4128 - 591 · Fax: - 593

Tel.: +44 (1704) - 551684 · Fax: - 551297

Tel.: +1 (770) 592 - 6630 · Fax: - 592 6640

**www.captor.de**

info@captor.de

sales@captor.co.uk

sales@captor.com

Technical data subject to alteration! Rev. AJ 21.03.18

# flow - captor

Type 4115.30 sm



## Installation and Adjustment Instructions

**Please read carefully:** No liability can be accepted for damage caused by improper use of the captor.

**Before any handlings „Safety Instructions“ must be fully read!**

4.0 Parts List			
Pos.	Description	Quantity/pcs.	Article No.
1	threaded rod, M6, L: 5" (127 mm), stainless steel 1.4305 (303)	3	00028381
2	hex nut, M6 (DIN 934), stainless steel 1.4305 (303)	12	00281601
3	lock washer for M6 (DIN 6797-I 6,4-VA), stainless steel 1.4305 (303)	6	00028057
4	cap nut, M6 (DIN 1587), stainless steel 1.4305 (303)	3	00028201
5	O-ring, Viton Vi500, 24,5x2	2	00241191
6a	fitting <b>G 1- 1/2" (BSP)</b> (DIN ISO 228), stainless steel 1.4571, 316 Ti	1	004318931
	<b>alternativ:</b>		
6b	fitting <b>1- 1/2" NPT</b> , stainless steel 1.4571, 316 Ti	1	00431893

**weber**

Sensors GmbH Strohdeich 32

Sensors Ltd. 66 Eastbourne Road, Southport

Sensors LLC. 4462 Bretton Court, Building 1, Suite 7

DE-25377 Kollmar

Merseyside PR8 4DU, UK

Acworth, Georgia 30101, USA

Tel.: +49 (0)4128 - 591 · Fax: - 593

Tel.: +44 (1704) - 551684 · Fax: - 551297

Tel.: +1 (770) 592 - 6630 · Fax: - 592 6640

**www.captor.de**

info@captor.de

sales@captor.co.uk

sales@captor.com

Technical data subject to alteration! Rev. AJ 21.03.18